

 


# Nerf Mega Magnus Spring Replacement

Written By: Averi Fletcher



## Step 1 — Spring

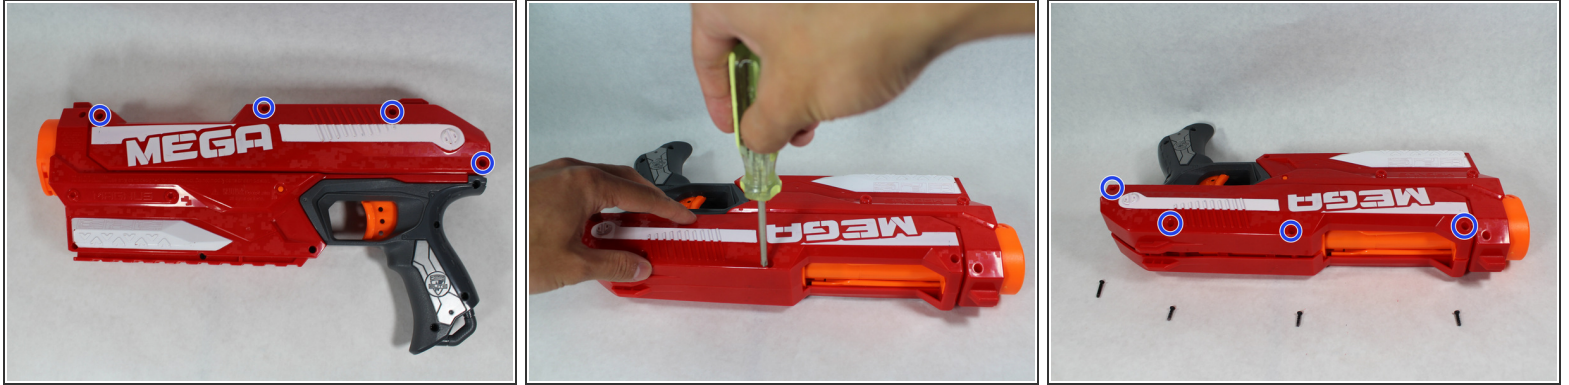

- Start by removing the (4) exterior Phillips screws from the shell of the gun with a #1 Phillips Screwdriver.

## Step 2



- Pulling upward from the rest of the shell, carefully remove the half of the slide facing you.



### Step 3



- On the same side, remove all (9) screws from the body of the blaster as shown.

### Step 4



 
- Lift up on the top half of the shell with deliberate force. This should reveal the internals.

## Step 5



- Remove the screws from the trigger mechanism and lift it upward


## Step 6

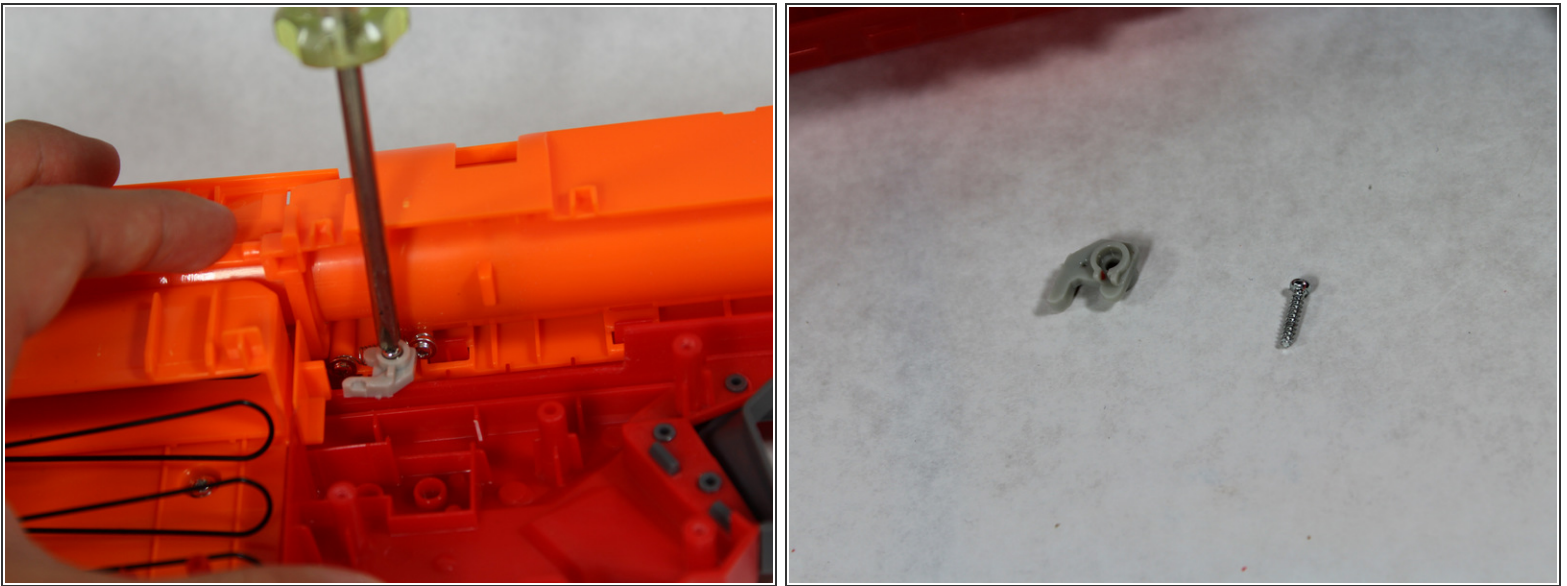

- Locate the small grey piece under the plunger tube and remove the screw.



## Step 7

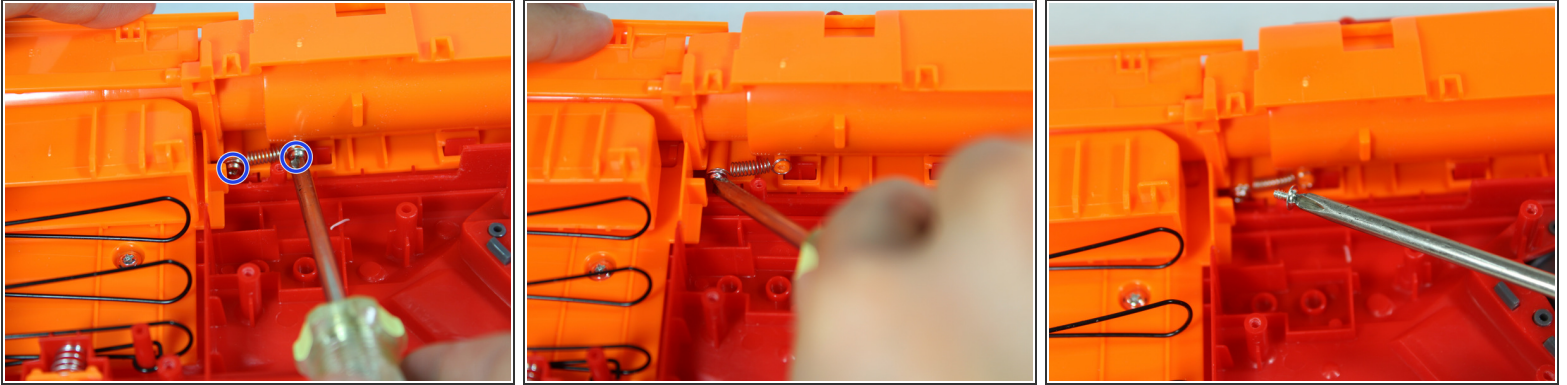 




- Locate the screws on the return spring. Using a counterclockwise rotation, remove both of the screws.

## Step 8



  
 
- Using a small tool, carefully remove the spring from its pegs.

## Step 9

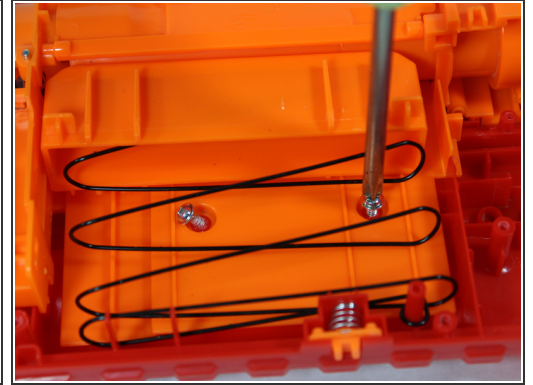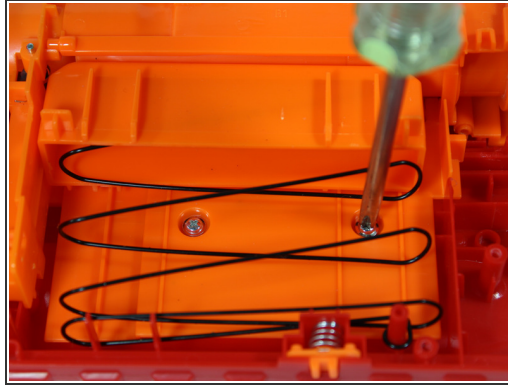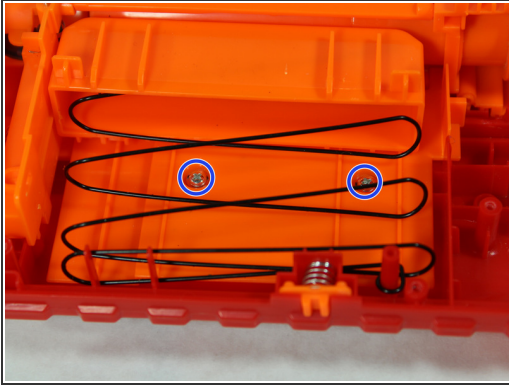


- Locate the screws behind the dart pusher mechanism. Carefully remove each screw.

## Step 10

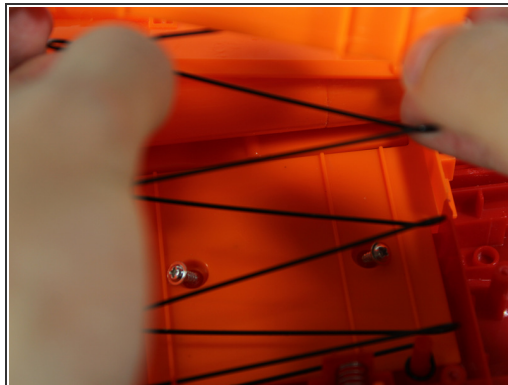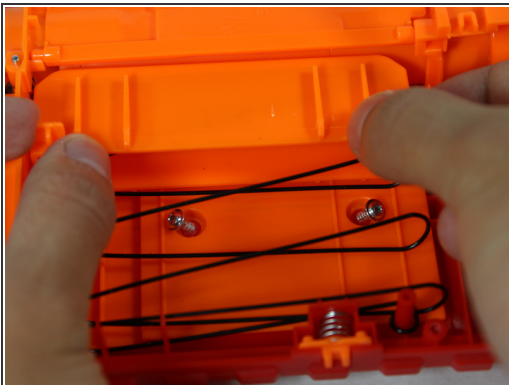  




- Pull upwards on the dart pusher and spring to remove them.

## Step 11

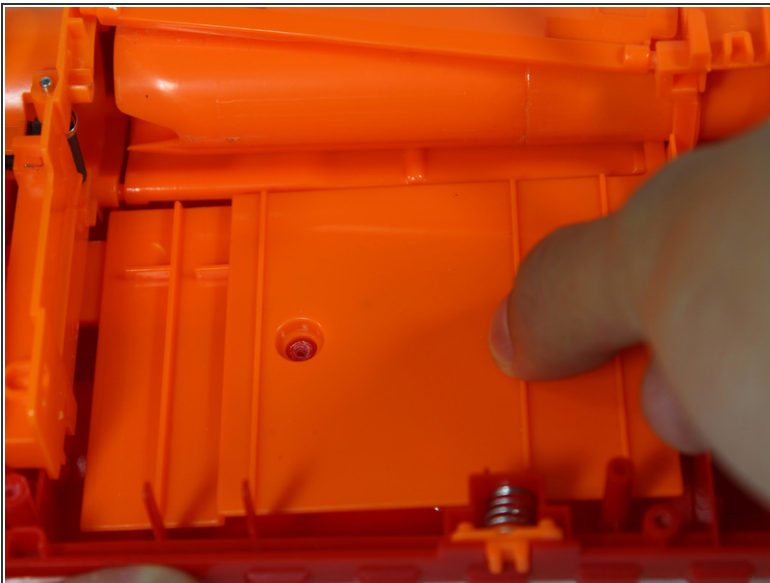 

- Lift up on the magazine plate in order to remove it.


## Step 12

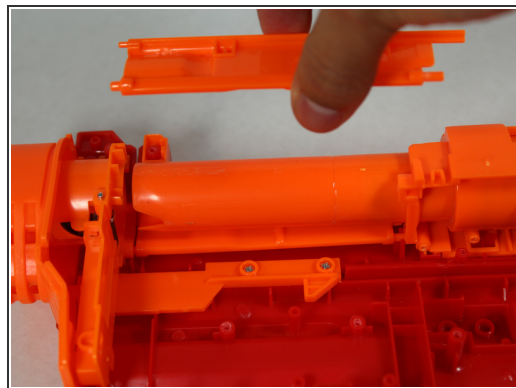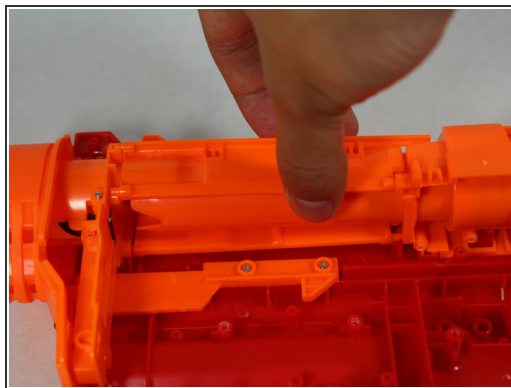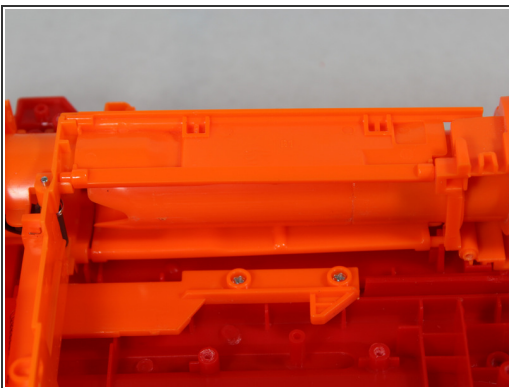   

- Pull upward on the dart lip and it will lift off.




## Step 13

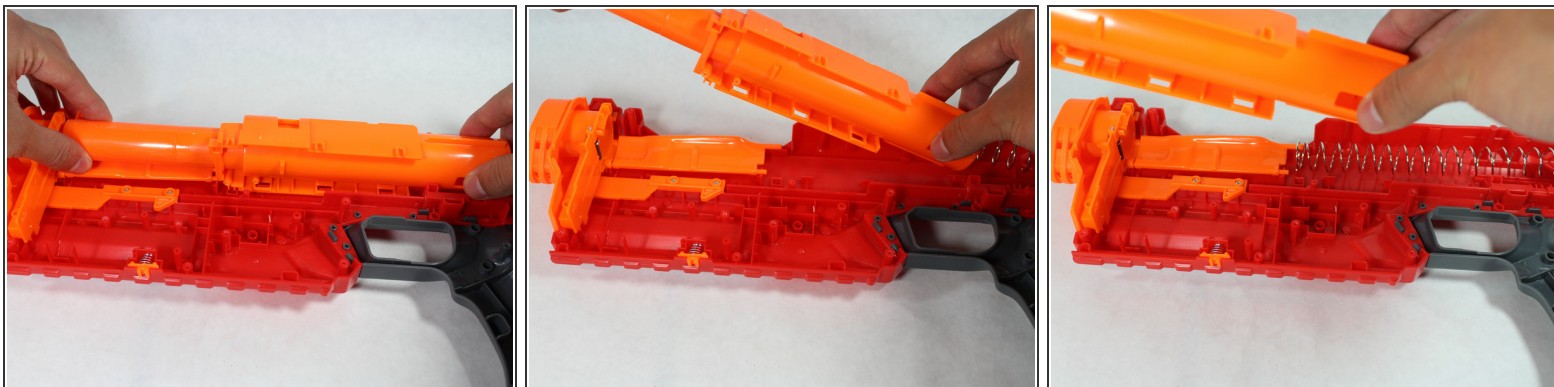 

- Lift the left side of the plunger tube from its peg and the rest will slide off the spring peg.

## Step 14

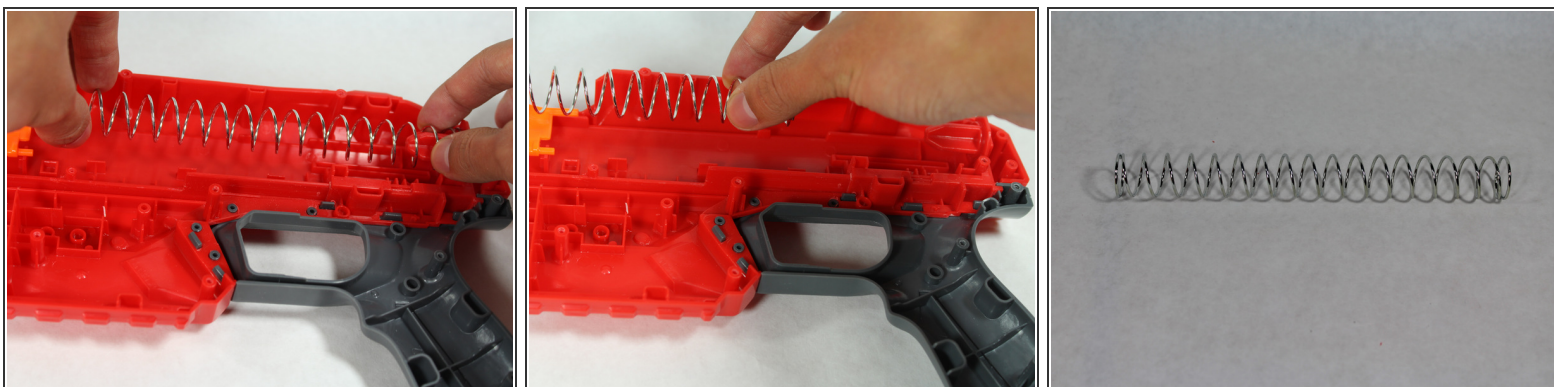 

- Slide the spring off its peg. If the spring is damaged, replace it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-03 07:27:32 AM.